

**TD17 SERIES**

**IMPORTANT SAFEGUARDS**

When using electrical equipment, basic safety precautions should always be followed, including the following:



THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


CE PRODUIT DOIT ÊTRE INSTALLÉ EN CONFORMITÉ AVEC LE CODE DE L'INSTALLATION PAR UNE PERSONNE QUI connaît BIEN LA CONSTRUCTION ET LE FONCTIONNEMENT DU PRODUIT ET LES RISQUES ENCOURUS.

DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.



**SAVE THESE INSTRUCTIONS**

**SAFETY RECOMMENDATION**

A 1/16" diameter cable with end-loop (not included) is recommended for attaching the fixture structural to the upper structural

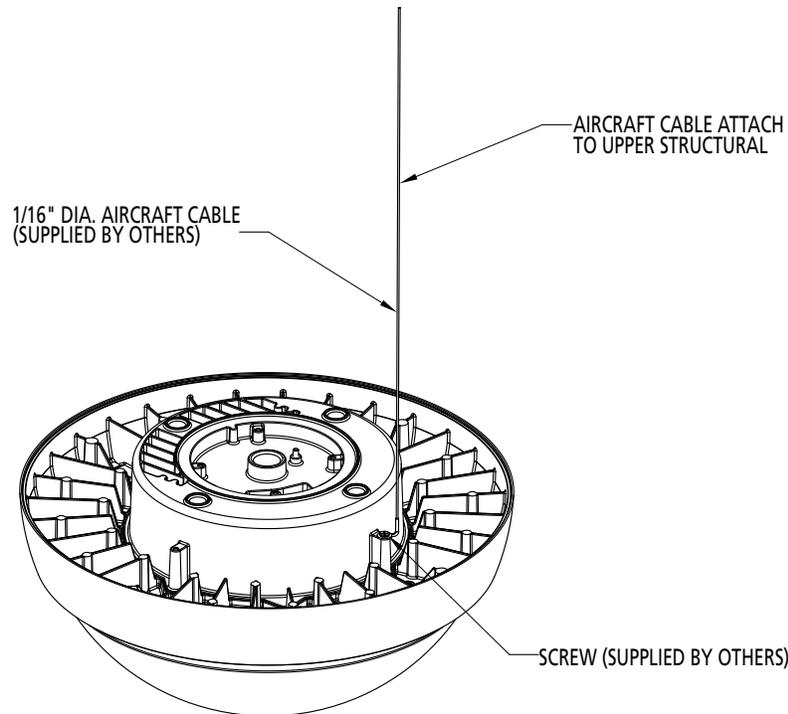

- 1: Remove tertiary lens (if provided) by unscrewing (4) captive screws.
- 2: Remove heatsinking/LED base by unscrewing (4) captive screws. These will be the inner most screws.
- 3: Disconnect the quick connector wires from the LED board and the driver.
- 4: Make electrical connection to J-box (for sizes, see next page). Circuit wire connection must be in J-box. Install housing to surface using (4) 5/16" diameter mounting holes.
- 5: Re-assemble by reversing the removal procedure.


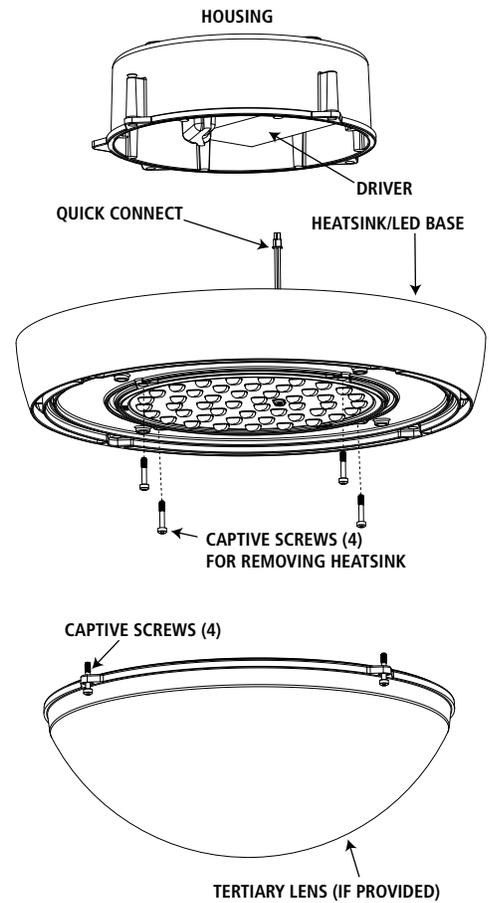
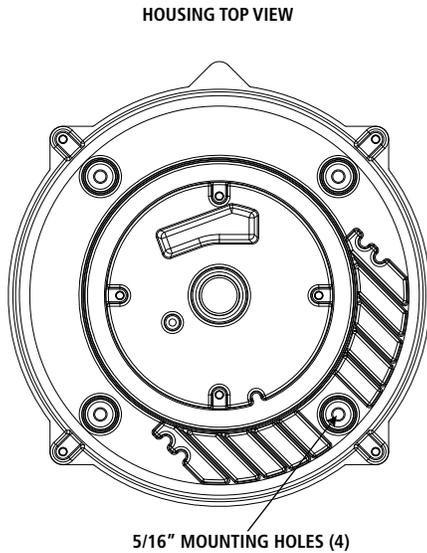


**1:** Quick mount plate fastens to a secure J-box. Screws by others.


**2:** Align hanger bracket with center slot on top of fixture as shown at right. Fixture can then hang from bracket while electrical connections are made.

**3:** After excess wires are in J-box (see sizes below), push the fixture up to the mounting plate. Locking hooks should slide through slots. Twist fixture until a "click" is felt or heard. Fixture is now in place.

USED WITH THE FOLLOWING  
JUNCTION BOX SIZES:  
4" ROUND  
4" SQUARE  
3-1/2" OCTAGON

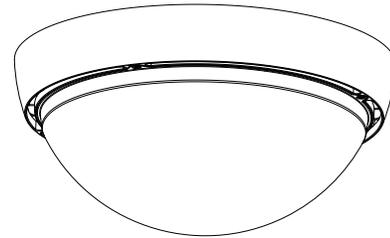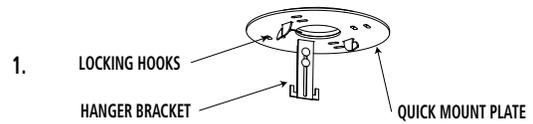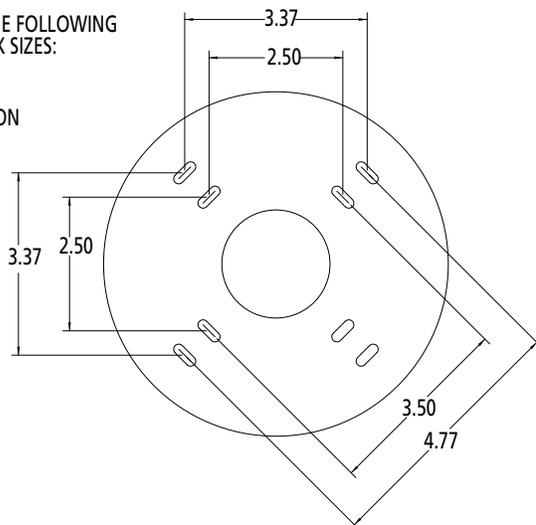


- 2. ALIGN HANGER BRACKET WITH CENTER SLOT
- 3. LOCKING HOOK SLOTS

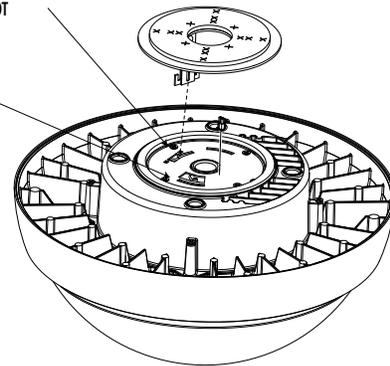

### DIRECT TO SURFACE & QUICK MOUNT

No tools required. Must install before fixture is mounted.

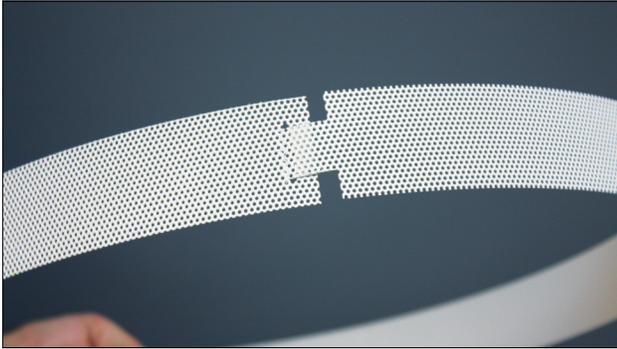


1. Fasten tab through slots as shown above.



2. Bird Guard lays inside of casting.


**SWIVEL MOUNT NOT RECOMMENDED**  
**(Kenall does not supply counterbalance system)**

- 1: Attach 3/4" threaded conduit to housing (provided by others).
- 2: Make electrical connections in conduit body (supplied by others).

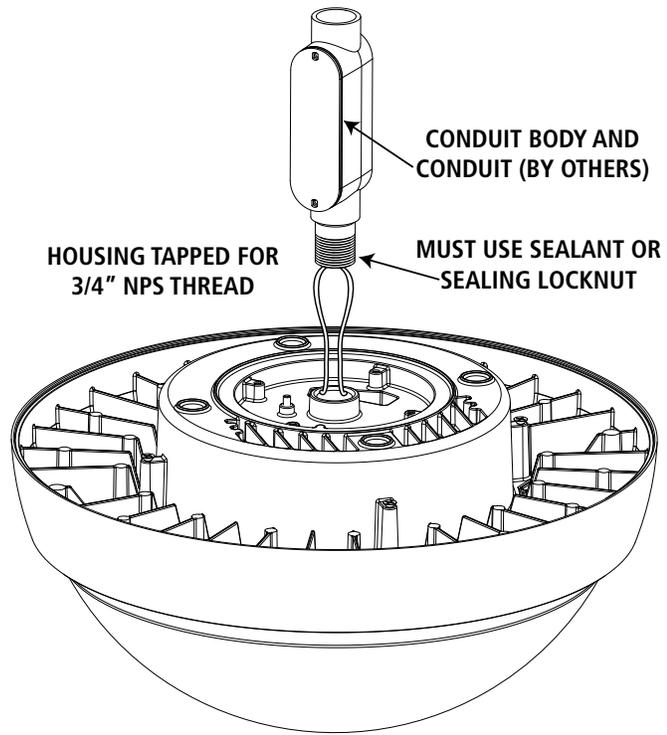

- 1: Attach housing plate to housing. Align notch. Use (4) flat head screws (provided).
- 2: Assemble trunnion kits as shown using (4) 1/4-20 x .500" screws and nuts (provided).
- 3: Attach trunnion brackets to housing plate with (4) 10-32 x .375" hex head screws (provided).
- 4: Make electrical connections in conduit body (supplied by others). Attach 3/4" NPT conduit hub (supplied by others) between conduit and J-box.

**NOTE:** Top of bracket to top of the fixture measurements: 9.1" min; 14.6" max

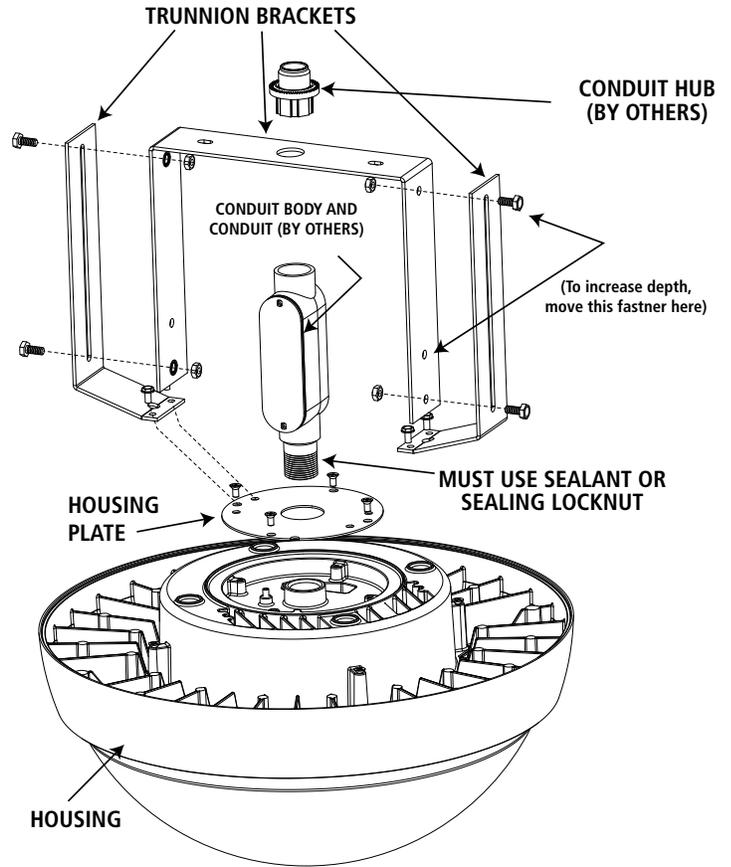

TD17 SERIES

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

CE PRODUIT DOIT ÊTRE INSTALLÉ EN CONFORMITÉ AVEC LE CODE DE L'INSTALLATION PAR UNE PERSONNE QUI connaît BIEN LA CONSTRUCTION ET LE FONCTIONNEMENT DU PRODUIT ET LES RISQUES ENCOURUS.

DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

SAVE THESE INSTRUCTIONS

BIRD GUARD INSTALLATION - PENDANT MOUNT & TRUNNION KIT

- 1. Bird Guard lays on top of casting.

(For Trunnion Kit remove tabs)



- 2. Attach both sides with (4) screws provided.

NOTE: For LEL option, align hole in bird guard with LED indicator








Pendant Mount



Trunnion Kit




**MOUNT FIXTURE WITH REGARDS TO OPTICAL ALIGNMENT KEY DIRECTION**

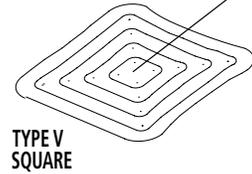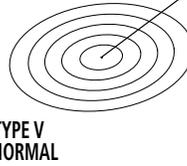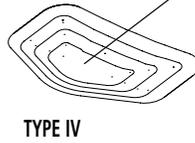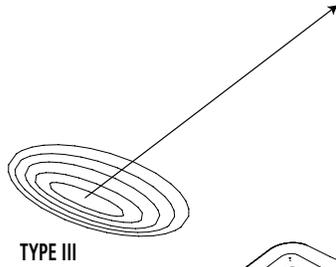
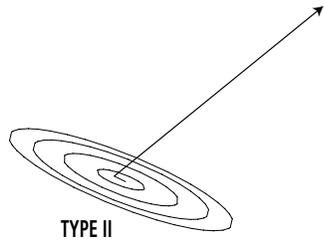


LIGHT DISTRIBUTION PATTERN TYPES

TYPES II, III, IV

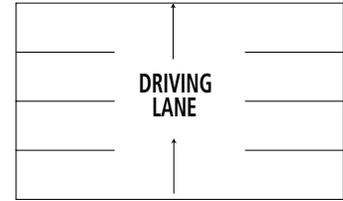

TYPE V, NORMAL  
TYPE V, SQUARE

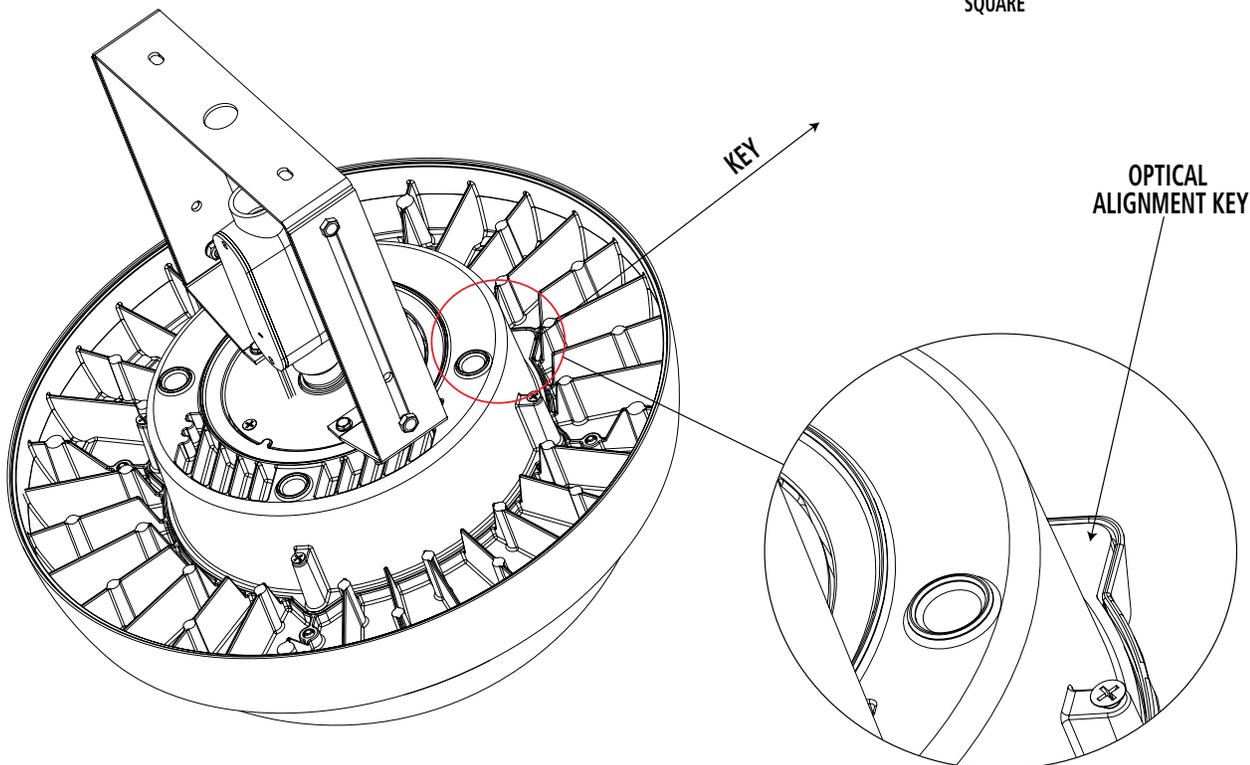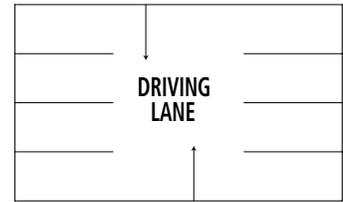

www.kenall.com | P: 800-4-Kenall | F: 262-891-9701 | 10200 55th Street Kenosha, Wisconsin 53144, USA

This product complies with the Buy American Act: manufactured in the United States with more than 50% of the component cost of US origin. It may be covered by patents found at www.kenall.com/patents. Content of specification sheets is subject to change; please consult www.kenall.com for current product details. ©2019 Kenall Mfg. Co.

A brand of **legrand**

---

## CUSTOMER SERVICE

---

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

## WARRANTY

---

For warranty information visit [www.kenall.com/Resources/Certified-Performance-Warranties](http://www.kenall.com/Resources/Certified-Performance-Warranties)

